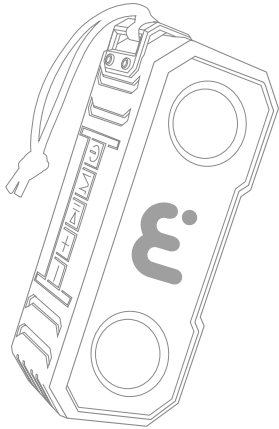# OUTBACK

WATERPROOF BLUETOOTH SPEAKER

User Manual
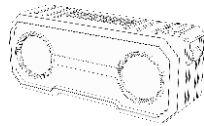
Model: MyBat Pro Outback

SAFETY MEASURES

To ensure proper use of this product, please take the time to read this instruction manual carefully before use. Please observe all the instructions about safe operation and please keep this instruction manual in a safe place for future reference.

1. Protection of power supply wire: Do not place the cable in the path of foot traffic. Do not place heavy furniture on the cable. Never pull the cable to unplug the unit from the socket, always disconnect the unit from the main power supply by pulling the plug out of the socket.

2. Ventilation: In order to prevent this unit from overheating, place it in a well-ventilated area on a stable surface. Never place it on a bed, sofa or carpet where the ventilation will be restricted.

3. Dismantling: In order to avoid the risk of electric shock, do not dismantle the unit. Should your unit be faulty or broken please refer servicing to an authorized service center.

4. Strange Odor: Should the speaker emit any strange odor, immediately unplug it from the wall socket. Do not use the unit again until you have had it repaired or contacted the manufacturer.

5. Do not expose this unit to liquid of any kind.

WHAT'S IN THE BOX

MyBat Pro Outback
Bluetooth Speaker x 1
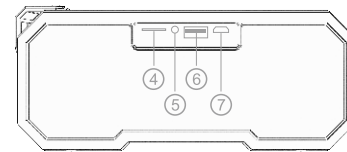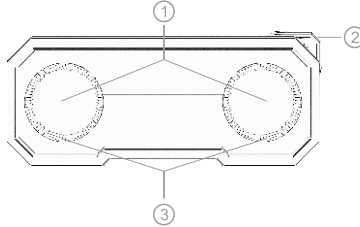
Micro USB
Charging Cable x 1
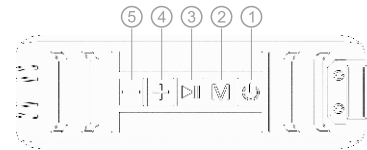
3.5mm Audio
Cable x 1

Rope x 1

User Manual x 1

PRODUCT OVERVIEW

1. Speakers
2. Hook Hole
3. LED Lights
4. TF Card Slot
5. 3.5mm AUX Input
6. U Disk Slot / Power Bank Output Port
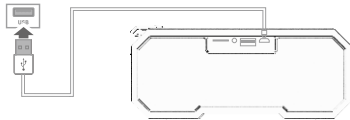7. Charging Port

CONTROL PANEL

1. ⏻ Press and hold to turn power on/off; Double-click to turn on LED Lights; For calls, click to answer or end.

2. M Mode: press to switch setting for Bluetooth / MP3 / FM

3. ▶II Play / Pause; Press and hold to enter TWS Dual Connection mode; In FM Mode, click three times to automatically scan FM channels (auxiliary antenna can be connected to the charging port).

4. ➕ Press and hold to increase volume / click to go to the next song.

5. ➖ Press and hold to decrease the volume / click to go to the previous song.

SPECIFICATIONS

Model	MyBat Pro Outback
Loudspeaker Output	8W x 2
Horn Size	52mm
Bluetooth Version	5.0
Bluetooth Range	10~30m / 33~100ft
Frequency Response Range	90Hz – 20KHz
Signal Noise Rate	≧80DB
Battery Capacity/Voltage	3000mAh / 3.7V
Battery Charge Time	3H
Working Time	6H
USB Power Input	5V / 1A
Product Size	205 x 67 x 85mm

CHARGE THE SPEAKER

Please charge the speaker for at least 3 hours before using it for the first time. Insert the charging cable into the Micro USB charging port, connect the USB plug into 5V/1A USB power Charger.

POWER ON / POWER OFF

1. Power on: Press and hold [⏻] button for 3 seconds, the speaker will be turned on, and a voice prompt of "Power on" will be issued.

2. Power off: Press and hold [⏻] button for 2 seconds, the speaker will be turned off, and a voice prompt of "Power off" will be issued.

BLUETOOTH MODE

1. Turn on the speaker, the speaker will have a voice prompt "Ready to Pair".

2. Turn on your device and activate the Bluetooth function.

3. Search for Bluetooth pairing name "MyBat Pro Outback" and click to pair, the speaker will pair automatically and the speaker will have a voice prompt "Paired Successfully".

4. Press [▶II] button to play music or control the music settings from your phone.

5. Hands-free: Press the [⏻] button to answer the call; During a call, press the [⏻] button to hang up the call.
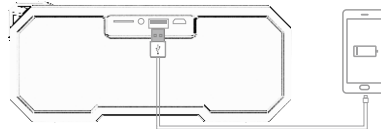
OTHER CONNECTIONS

1. TF Card: Insert the TF card, the speaker will have a voice prompt "TF Card" and automatically play the music on the TF card.

2. U disk: Insert the U disk, the speaker will have a voice prompt "U disk" and automatically play the music on the U disk.

3. Aux in: Use 3.5mm audio cable to connect speaker and other playback devices. The speaker will have a voice prompt "Line in".

4. FM mode: Press [M] button, switch to FM mode. The speaker will have a voice prompt "FM Tuner". Three clicks [M] button to automatically search FM channels (plug in the charging line can be used as auxiliary antenna)

TWS MODE

1. Take two Outback speakers, turn them both on and place together.

2. While both speakers are in Pairing mode, press the [▶II] button to enter TWS Dual Connection Mode. The speakers will pair together automatically.

3. Pair the speakers with your mobile device for a surround sound experience.

POWER BANK FUNCTION

This speaker can charge a mobile phone, plug the USB port of the charging cable into the USB port of the speaker, and connect the other end to the phone to charge the phone.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radiofrequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.